



TR 9650 Mobile Bath Lift System

Quick guide for the Chair Lift

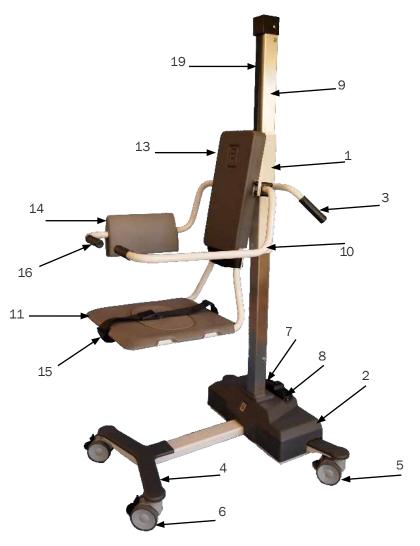

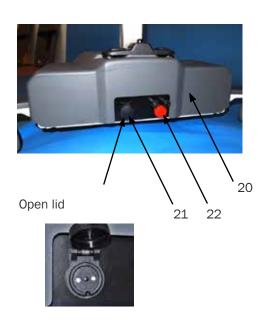



Working Load Limit: 150 kg (330 lbs)

| Position | Description | 10 | Rotating arm/back supports |
|----------|---------------------------------------|----|----------------------------|
| 1 | Support column | 11 | Hygiene seat and slot |
| 2 | Chassis Base | 13 | "TR" Protection pad |
| 3 | Transport handle | 14 | Backrest Pad |
| 4 | Chassis leg | 15 | Safety belts |
| 5 | Positive brake castors, 100mm Twin | 16 | Grip |
| 6 | Straight steering castors, 100mm Twin | 19 | Drive belt |
| 7 | Foot control for raising | 20 | Low battery audible tone |
| 8 | Foot control for lowering | 21 | Battery charger input |
| 9 | Stainless Steel column | 22 | Emergency Stop |





TR 9650 Mobile Bath Lift System

Quick guide for the Chairlift



- Only qualified staff, who understand all operating and safety procedures may operate the equipment.
- Safety belts must be securely fastened around patient at all times.
- Never leave the patient unattendend.
- Castor brakes must be securely locked on the Lifter before transferring a patient on to the chair.
- The patient must be positioned comfortably on the chair, with folded rotating arm.
- Make sure that all parts that come in contact with the patient are intact and without sharp edges.
- Ensure that the Lift can be moved, raised or lowered safely to avoid any pinch injuries to patient.
- Operate the Lift carefully when transporting patients through narrow corridors or over irregular uneven surfaces.
- The TR battery charger is the only one approved for charging.
- Do not use battery charger in wet or damp areas potential shock hazard.
- It is recommended that the batteries are charged daily or whenever Lifter is not in use. Batteries can not be overcharged.
- Check that castor brakes and straight steering are free from damage.
- Be sure that all details are in place and free from damage and all screws are in place.
- Pads must be kept well maintained in place.
- Lift and chair must be inspected visually for sign of wear.
 Lift should not be used if defects are noted. Prompt service is required.

Warning: Never use the Lifter in any way that varies from the safety precautions and operating procedures detailed in the operating manual. The equipment must not be operated by anyone until the user has fully read and understands the instructions in the operating manual.

Safety autostop mechanism:

If the chair hits an obstacle when lowering, the Lift will safely stop automatically. To release it, just press the "up" right arrow foot control. Same procedure if the lifting belt is slacking. If lifting belt fails, the chair will stop/lock automatically on the column. Call for technical assistance.

For further information see Operating manual